


# Q45AD9FP Photoelectric Sensor – Photoelectric Sensor for Plastic Fibers

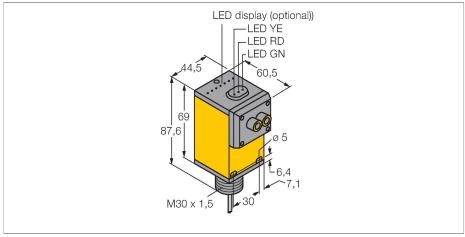

Technical data


Ambient temperature

 
Relative humidity

#### **Features**

- Cable, PVC, 2 m
- Protection class IP67
- Sensitivity adjusted via potentiometer
- Adapter set PFK-B for connecting plastic optical fibers are available separately
- Operating voltage: 5...15 VDC
- ■NAMUR output: dark <= 1.2 mA; light >= 2.1 mA
- Acc. to EN 60947-5-6 (NAMUR)
- ■ATEX category II 1 G, Ex zone 0

#### Wiring diagram

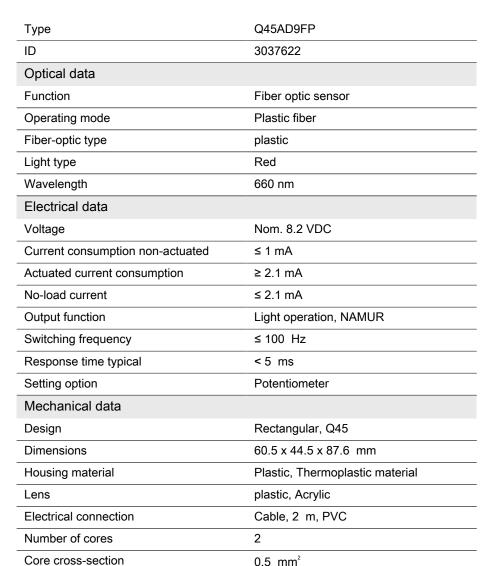




#### Functional principle

Glass or fibre optic sensors are the optimum choice for high temperature or space restricted applications. Fibre optics transfer the light from the sensor to a remote object. Individual fibre optics are used for opposed mode sensing, whereas bifurcated fibre optics are suited for retro-reflective or diffuse mode operation.

Excess gain curve Excess gain in relation to the distance

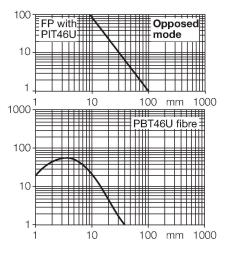


-40...+70 °C

0...90 %

Protection class	IP67
Special features	Wash down
Switching state	LED, Red
Excess gain indication	LED, flashing
Tests/approvals	
MTTF	67 years acc. to SN 29500 (Ed. 99) 40 °C
Approvals	CE, FM, CSA
Approvals	ATEX II 1G ATEX II 2G ATEX II 3G
Device marking	
Ignition protection category	Ex ia IIC T5
Ex approval acc. to conformity certificate	FM12ATEX0094X

#### Accessories

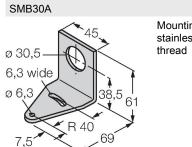

Mounting bracket, rectangular, stainless steel, for sensors with 30mm thread

3032723

3052521



Mounting bracket, stainless steel, for M10 x 1.5 thread, thread length 30 mm  $\,$ 

3011185




Mounting bracket, PBT black, for sensors with 30 mm thread, rotatable


PFK-B 3093520

Adapter set with 4 adapters per set to connect plastic optical fibers to Q45 fiber-optic sensors

## TURCK
 
### Accessories

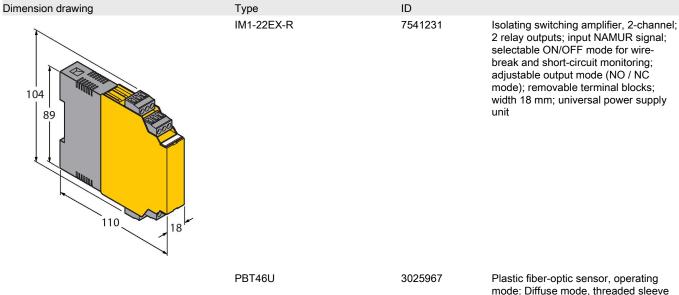




Plastic fiber-optic sensor, operating mode: Diffuse mode, threaded sleeve M3 x 0.75 mm, field wireable wire without end tip, polyethylene sheath, ambient temperatures -30 °C...+70 °C

M6 x 0,75 ø 4
Nickel plated brass 2x ø1 fibre

PIT46U 3026034

Plastic fiber-optic sensor, operating mode: Opposed mode, threaded sleeve M3 x 0.5 mm, field wireable wire without end tip, polyethylene sheath, ambient temperatures -30  $^{\circ}$ C...+70  $^{\circ}$ C

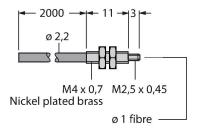



## **Operating Instructions**

Intended use	This device fulfills the directive 94/9/EC and is suited for use in explosion hazardous areas according to EN60079-0:2009, -11:2012, -26:2007. In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.
For use in explosion hazardous areas conform to classification	II 1 G (Group II, Category 1 G, electrical equipment for gaseous atmospheres).
Marking (see device or technical data sheet)	ⓐ II 1 G and Ex ia IIC T5 Ga acc. to EN60079-0, -11 and -26
Local admissible ambient temperature	-25+70 °C
Installation/Commissioning	These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas. Please verify that the classification and the marking on the device comply with the actual application conditions.
	This device is only suited for connection to approved Exi circuits according to EN 60079-0 and EN 60079-11. Please observe the maximum admissible electrical values. After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).
Installation and mounting instructions	Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet. In order to avoid contamination of the device, please remove possible blanking plugs of the cable glands or connectors only shortly before inserting the cable or opening the cable socket.
Service/Maintenance	Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.